

**McIntosh Laboratory
IR Remote Control Data**

KEY	CODE	MOST PREAMPS AND CONTROL CENTERS	CONTROL CENTER C100, C42	CD PLAYER MCD7009, MCD7010, MCD751	CD CHANGER MCD7008	LASER DISC MLD7020	DVD PLAYER MVP831
		Note: 2,3	Note: 2,3	Note: 1,4	Note: 1,4	Note: 2,6	Note: 2,5
1	00H			NEXT	DISC 1	0	
2	01H	PLAY	PLAY		DISC 2	1	PLAY
3	02H	NEXT	NEXT		DISC 3	2	NEXT
4	03H	BACK,REWIND	BACK-REWIND		DISC 4	3	BACK
5	04H	STOP	STOP	BACK	DISC 5	4	STOP
6	05H	ACC "ON"	ACC "ON"	PAUSE	DISC 6	5	
7	06H	ACC "OFF"	ACC "OFF"	REV		6	
8	07H	ENTER "E", PAUSE	PAUSE	FF		7	PAUSE
9	08H	SAT		PLAY		8	SETUP
10	09H	TV		STOP		9	MARKER
11	0AH	LASER		TIME			SUBTITLE
12	0BH	VCR1		AUTOSPACE			AUDIO
13	0CH	VCR2		REPEAT			ANGLE
14	0DH	V-AUX, DVD					RETURN
15	0EH	MODE, TRIM SELECT, LOUDNESS	DISPLAY	A-B	DATA		TITLE
16	0FH	SYS CAL	TRIM	5			DISPLAY
17	10H	CD1	LINE 1	4		FF	MENU
18	11H	CD2	CD	3		REV	LEFT
19	12H	TUNER	TUNER	1			RIGHT
20	13H	TAPE1	TAPE 1	2	SCAN		UP
21	14H	TAPE2	TAPE 2	8			DOWN
22	15H	TAPE3	LINE 2	9			SELECT
23	16H	VIDEO	PHONO/AUX 1	0		STOP	
24	17H	PH/AUX	PHONO/AUX 2	7		PLAY	
25	18H	LEFT		6		PAUSE	
26	19H	UP		CLEAR			
27	1AH	RIGHT		PGM	SINGLE		
28	1BH	DOWN		DELETE			
29	1CH	SELECT		+10		POWER	
30	1DH	TITLE		REVIEW			
31	1EH	DISPLAY		INDEX >			
32	1FH	MENU		INDEX <		+10	
33	40H	POWER	POWER	SINGLE	MODE		
34	41H	SYSTEM OFF			CLEAR		

**McIntosh Laboratory
IR Remote Control Data**

KEY	CODE	MOST PREAMPS AND CONTROL CENTERS	CONTROL CENTER C100, C42	CD PLAYER MCD7009, MCD7010, MCD751	CD CHANGER MCD7008	LASER DISC MLD7020	DVD PLAYER MVP831
		Note: 2,3	Note: 2,3	Note: 1,4	Note: 1,4	Note: 2,6	Note: 2,5
35	42H	MAIN VOLUME UP	VOLUME UP		BACK		
36	43H	MAIN VOLUME DOWN	VOLUME DOWN	FADER	CANCEL		
37	44H	REAR VOLUME UP, TRIM LEVEL UP			REPEAT		
38	45H	REAR VOLUME DOWN, TRIM LEVEL DOWN			STOP		
39	46H	MUTE	MUTE		PLAY		
40	47H	SURR. SOUND SIGNAL PROC., SURR. MODE, M/S	RECORD PROC.		FF		
41	48H	HOME			NEXT		
42	49H	TAPE MONITOR 1	RECORD MONITOR		ENTER		
43	4AH	TAPE MONITOR 2			REVIEW		
44	4BH	POWER ON			PAUSE		
45	4CH	SPEAKER 1	SPEAKER 1				REPEAT MODE
46	4DH	SPEAKER 2	SPEAKER 2			SIDE A	A-B REPEAT
47	4EH	MONO/STEREO, DOOR, TAPE COPY 1-2	MONO		TRACK 0	SIDE B	PLAY MODE
48	4FH	REC LOCK, TAPE COPY 2-1	LISTEN PROC.		TRACK 1		CLEAR
49	50H	1	1		TRACK 2		1
50	51H	2	2		TRACK 3		2
51	52H	3	3		TRACK 4	NEXT	3
52	53H	4	4		TRACK 5	BACK	4
53	54H	5	5		TRACK 6		5
54	55H	6	6		TRACK 7		6
55	56H	7	7		TRACK 8		7
56	57H	8	8		TRACK 9		8
57	58H	9	9		VOL		9
58	59H	0	0		VOL		0
59	5AH	SCAN-SEEK DOWN, REW	SEEK DOWN - REV				REV
60	5BH	SCAN-SEEK UP, FF	SEEK UP - FF		RANDOM		FF
61	5CH	SEARCH-REVIEW, +10	REVIEW - +10				+10
62	5DH	AM, SIDE A, DISC	AM - DISC				
63	5EH	FM, SIDE B, TRACK	FM - TRACK				
64	5FH	POWER OFF					

NOTE 1: Uses single code transmission

NOTE 2: Uses continuous code transmission

NOTE 3: Custom Code CA55h

NOTE 4: Custom Code CA95h

NOTE 5: Custom Code 8050h

NOTE 6: Custom Code 8A75h

**McIntosh Laboratory
IR Remote Control Data**


TRANSMITTER:

The following data refers to the NEC uPD6122G-001 IR Transmitter


CUSTOM CODES:

CODE	C0	C1	C2	C3	C4	C5	C6	C7	C'0	C'1	C'2	C'3	C'4	C'5	C'6	C'7
CA55H	0	1	0	1	0	0	1	1	1	0	1	0	1	0	1	0
CA95H	0	1	0	1	0	0	1	1	1	0	1	0	1	0	0	1
8050H	0	0	0	0	0	0	0	1	0	0	0	0	1	0	1	0
8A75H	0	1	0	1	0	0	0	1	1	0	1	0	1	1	1	0

DATA FORMAT:

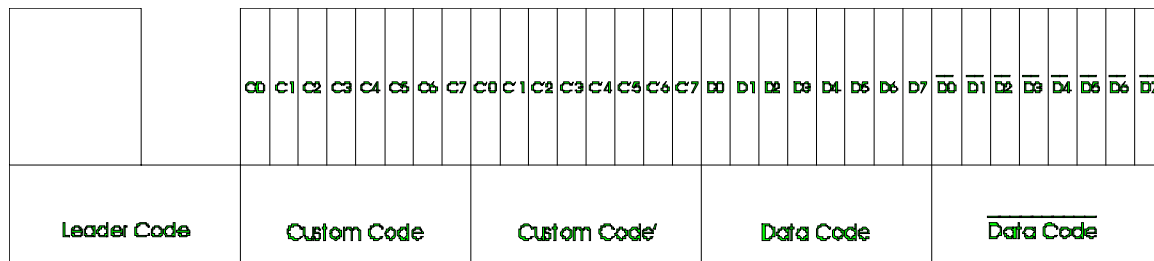

CARRIER:

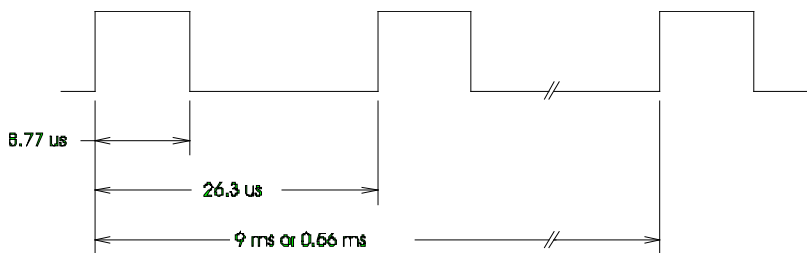


CARRIER FREQUENCY: 37.9 kHz

DUTY: 1/3

McIntosh Laboratory
IR Remote Control Data

CONTINUOUS TRANSMISSION FORMAT:

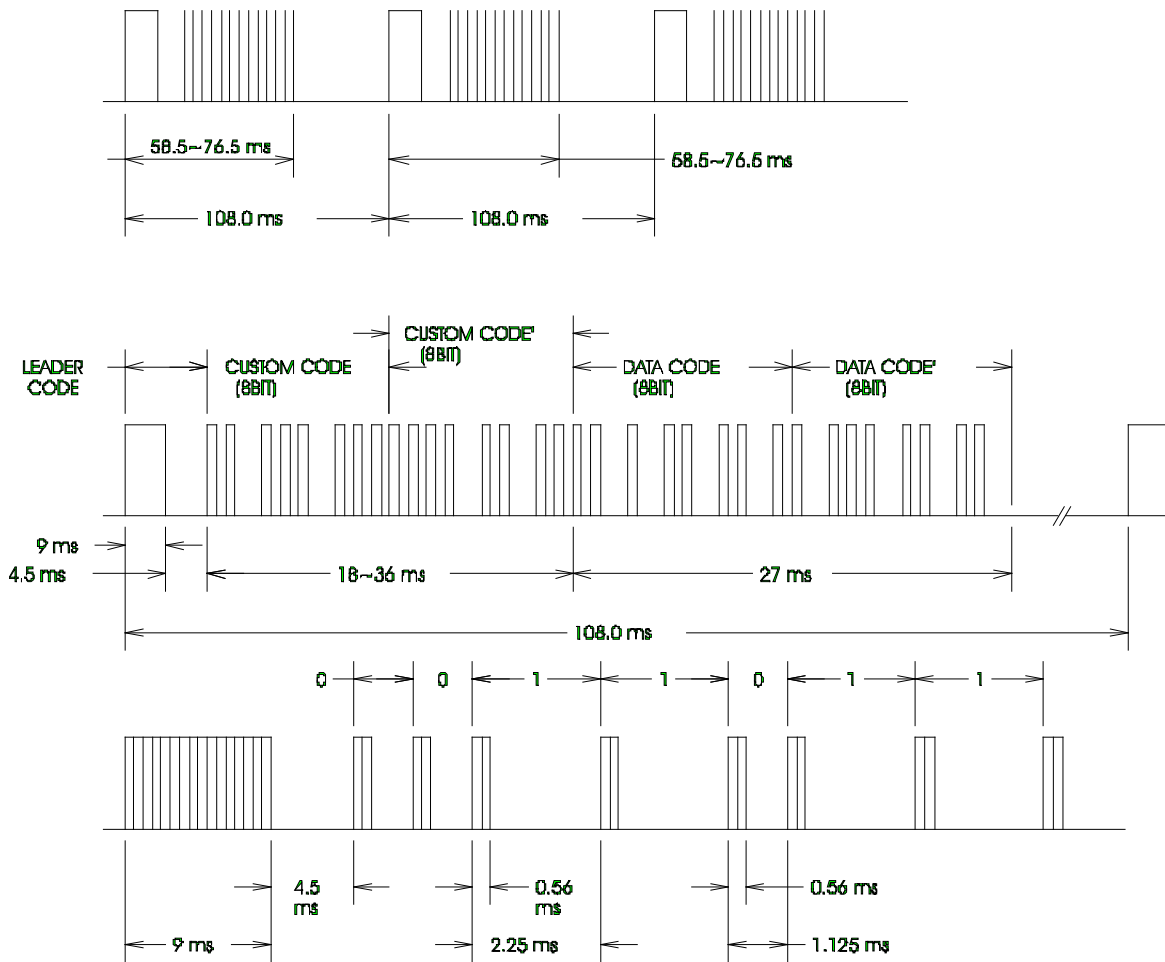

McIntosh Laboratory IR Remote Control Data

SINGLE TRANSMISSION WITH CONTINUATION CODE:

